
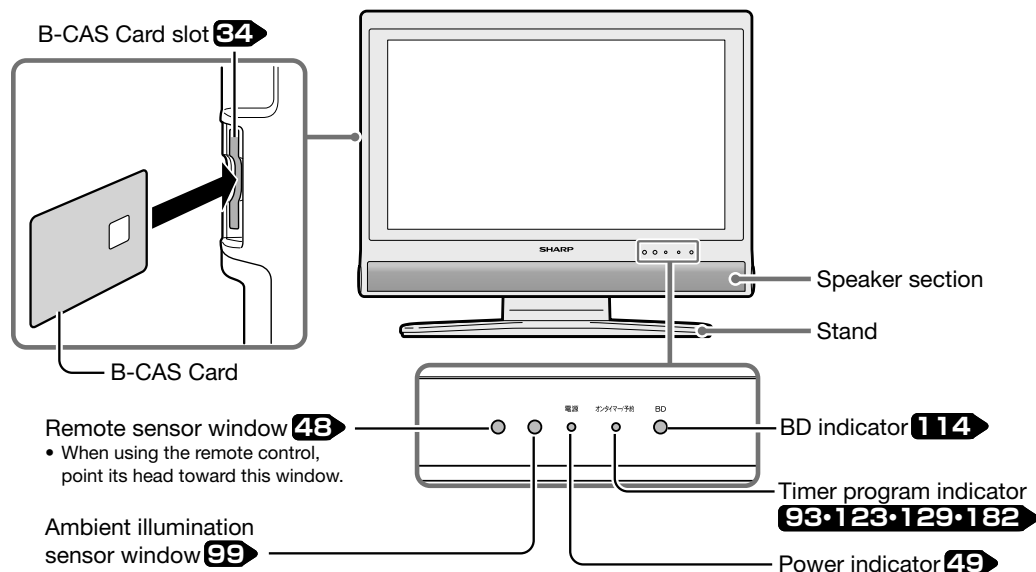 


# Part Names - Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

## Front view

 


### Adjusting the LCD panel angle **22**



- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

## Control panel

### Right side view

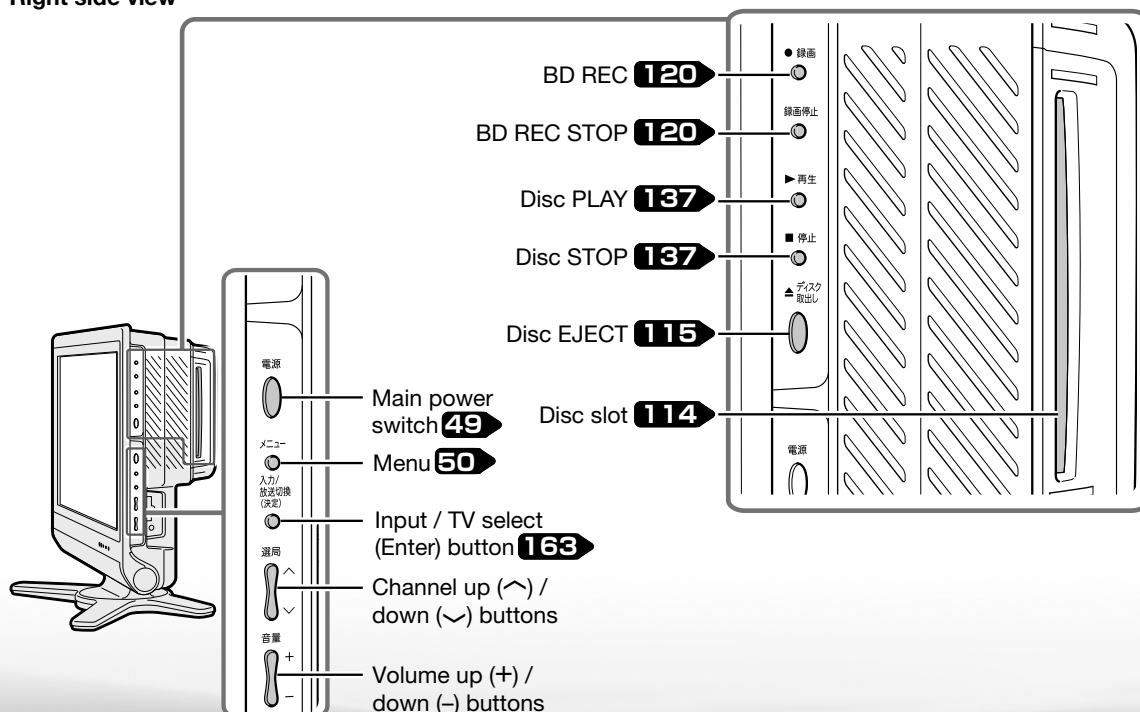

# Back view

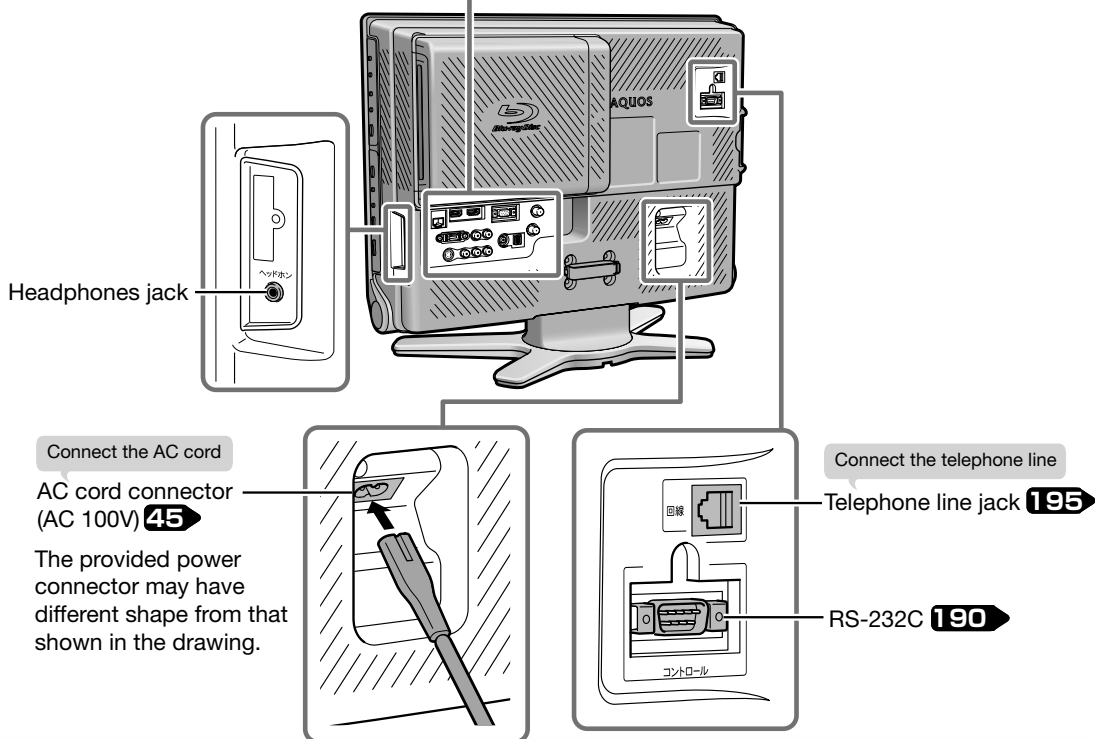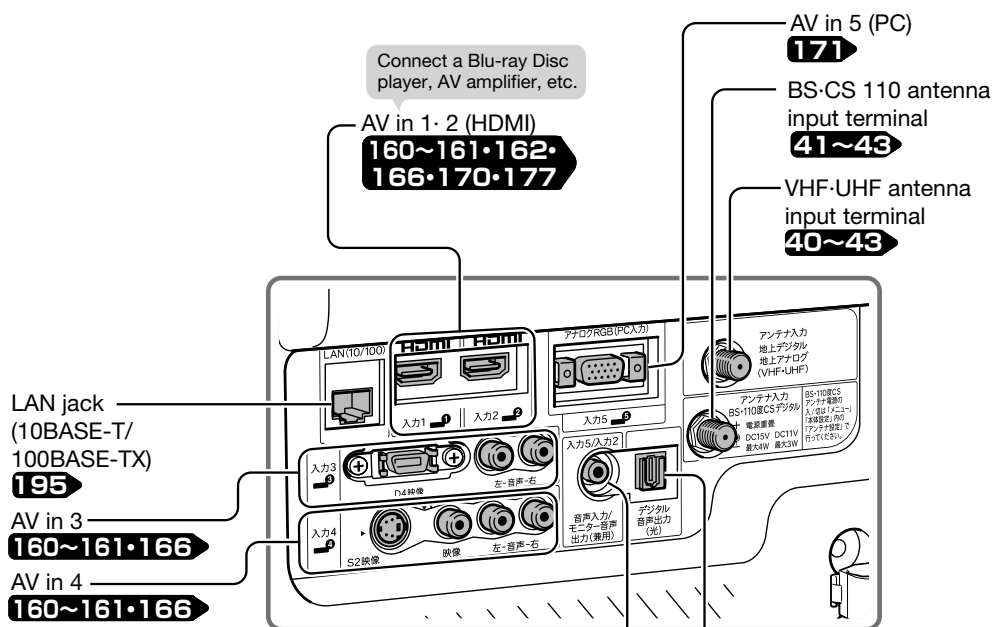  

はじめに

準備

番組を見る

録画・予約録画

再生

ビデオプレーヤー！  
パソコンにつなぐ

ファミリンク  
で録画・再生

活用

故障かな・仕様・  
寸法図など

English  
Guide

# Part Names - Remote Control Unit

## Active/Standby **49**

Press to engage the TV set in the active or standby mode.

## Channel select **77**

- Press to select a channel.
- Use to input a number for various settings.

## Terrestrial analog/Terrestrial

## Digital/BS/CS **76**

Select the CS digital channel for the first time. **55**

## Linked data broadcast

**80 • 91 • 146**

## Mute **77**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## Volume up (+)/down (-) **77**

Press to adjust the volume.

## EPG **82 • 84 • 122 • 181**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

## Finish **50**

Press to finish menu operation, etc.  
\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

## Other on-air programs **83**

Press to display the EPG for currently on-air programs only (裏番組).

## Display **78**

Press to display or turn off the channel call, etc.

## Playback programs recorded on a disc **137**

Fast forward, rewind, etc. during playback **143~145**

See Page 76 for how to select a program.

## Program info **90**

## Input select **163**

## Channel up (^)/down (v) **77**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped.

## List the programs recorded on a BD **138**

Display the Top Menu of the disc **141**

## Cursor (up, down, left, right) **50**

## Enter/Confirm **50**

## Return **50**

## Color **84~85 • 91**

Use to operate EPGs and data program screens.

## View status of the BD **128**

Display the Pop-up Menu (BD) or Disc Menu (DVD) **141**

## REC **120**

## REC STOP **120**

## Buttons under the cover

Hold the cover by the projections ( ) and lift.

## AV mode select **97**

## Audio select **88 • 89 • 146**

## Picture select **89 • 147**

## Caption **89 • 147**

## Favorite channel select/register **79**

## Freeze **90**

## Display the Playback Menu **148**

## Sleep timer **218**

## Screen mode **95 • 172**

## Menu **50**

Press to display or turn off the menu screen.

## Media select (TV/data) **76**

## CATV **80**

## Digital channel number input **79**

## Eject the disc **115**

 
## Familink **180~186**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

# Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

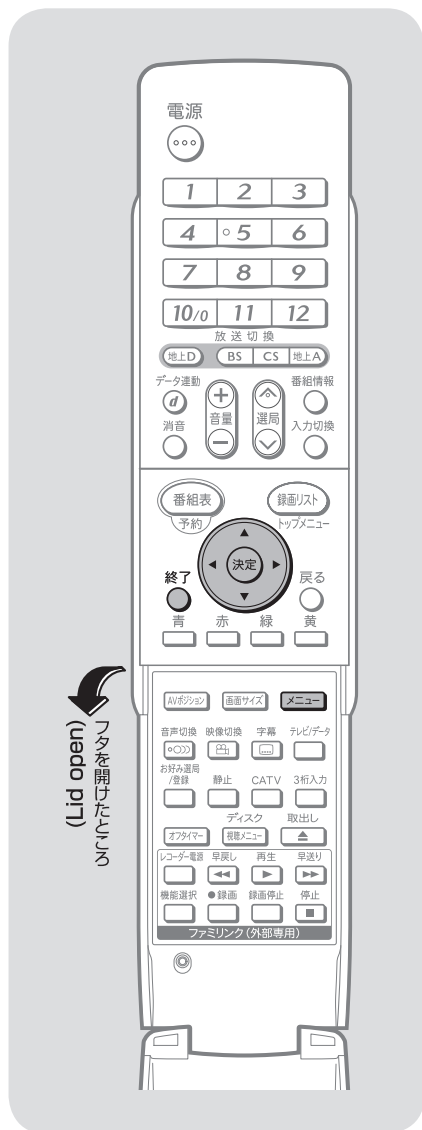

## 1

Display the menu screen.  
メニューを表示する

Press

メニュー

## 2

Select “本体設定” (Setup) – “Language (言語設定)” and Enter.

 
Select with



Press

決定

「本体設定」 – 「Language (言語設定)」を選ぶ

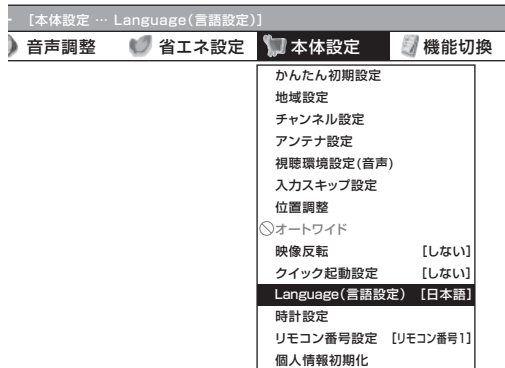

## 3

Select “English” and Enter.

 
Select with



Press

決定

「English」を選ぶ

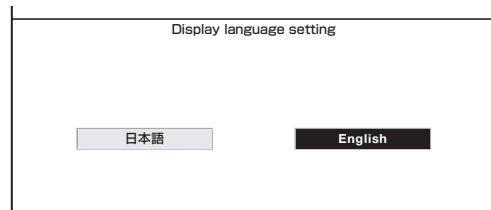

- The menu screen is now displayed in English.
- 画面表示が英語になります。

## 4

Finish this operation.

Press

終了

終了する

お知らせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」 – 「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

はじめに

準備

番組を見る

録画・予約録画

再生

パソコンに繋ぐ

ファミリンクで録画・再生

本機の機能の活用

故障かな仕様の寸法図など

English Guide